

# SEIKO INSTRUCTION MANUAL BY WATCH MODEL REFERENCE

For sales personnel involved in selling a Seiko Timepiece

THIS SEIKO INSTRUCTIONAL BOOKLET HAS BEEN PREPARED FOR THE  
SOLE BENEFIT OF OUR VALUED JEWELERS, SALES PERSONNEL, AND ALL  
CONCERNED IN SELLING A SEIKO TIMEPIECE.

WE TRUST THAT THIS CONVENIENT INFORMATIVE BOOKLET  
COVERING THE CURRENT SEIKO LINE WILL SERVE AS A VALUABLE AID  
TO YOU. PLEASE USE IT TO BEST ADVANTAGE.

## HOW TO REFER TO PROPER INSTRUCTIONS

Check for the Seiko model number which is always shown on the price ticket and watch box.

Then refer to the correct index tab, which indicates the watch series. (NOTE: the first 2 letters or numbers of a specific model indicate the series.)

These instructions will advise you how to simply start, set the time, and change the day and date. Also, other operational instructions and features relating to all Seiko models.

CONVENTIONAL MANUAL WIND WATCHES ARE NOT SHOWN IN THIS BOOKLET.

CROSS REFERENCE CHART BY CALIBER NUMBER  
AND SEIKO SERIES

| <u>Cal.</u> | <u>Series</u> | <u>Page</u> | <u>Cal.</u> | <u>Series</u> | <u>Page</u> |
|-------------|---------------|-------------|-------------|---------------|-------------|
| 0124        | - CY          | - 28        | 4110        | - CN          | - 19        |
| 0624        | - CQ          | - 24        | 4300        | - YR          | - 23        |
| 0634        | - CX          | - 25        | 4303        | - YQ          | - 23        |
| 0662        | - DB          | - 29        | 4633        | - CZ          | - 21        |
| 0843        | - CT          | - 21        | 4823        | - DA          | - 22        |
| 0903        | - CM          | - 19        | 5606        | - 58          | - 4         |
| 2202        | - ZM          | - 16        | 6105        | - 55          | - 4         |
| 2205        | - ZP          | - 16        | 6106        | - 54          | - 3         |
| 2206        | - ZH          | - 15        | 6109        | - CV          | - 13        |
| 2409        | - BX          | - 11        | 6138        | - AV          | - 9         |
| 2418        | - BY          | - 11        | 6139        | - AH          | - 6         |
| 2906        | - YP          | - 15        | 6309        | - DE          | - 14        |
| 3819        | - 60          | - 17        | 7006        | - AC          | - 5         |
| 3883        | - CP          | - 20        | 7009        | - CW          | - 13        |
| 3923        | - CD          | - 18        | 7016        | - BZ          | - 12        |
| 4006        | - AJ          | - 8         | 7025        | - DC          | - 14        |
| 4100        | - CR          | - 20        |             |               |             |

BRACELET ADJUSTING INSTRUCTIONS — Page 31

SERVICING PROCEDURES — Page 32

FEA-  
TURES  
54  
SERIESCD  
CM  
CN  
SERIES55029  
58  
AC  
SERIESCP  
CR  
CT  
CZ  
SERIESAH  
SERIESDA  
YQ  
YR  
SERIESAJ  
AV  
SERIESCQ  
CX  
SERIESBX  
BY  
SERIESCY  
DB  
SERIESBZ  
CV  
CW  
SERIESBRACE-  
LET  
ADJUST-  
MENTDC  
DE  
YP  
ZH  
SERIESSERVIC-  
ING  
PROCE-  
DURES

## POPULAR FEATURES OF A SEIKO WATCH

- **SHOCK-RESISTANT**

All Seiko watches are shock-resistant.

- **WATER-RESISTANT**

The water-resistant feature ensures water testing to specified depths.

Do not operate the crown when the watch is wet or in water. If the watch is used in water, or if it gets wet, wipe it completely dry. If it is exposed to sea water, rinse it in fresh water and then wipe it dry.

- **BILINGUAL ENGLISH-SPANISH CALENDAR**

The day of the week is shown bilingually and alternately. When one of the two languages is set, it will continue to appear. However, when shifting to the next day, the other language appears temporarily.

- **TRILINGUAL ENGLISH-SPANISH-FRENCH CALENDAR**

The day of the week is shown trilingually and alternately. When one of the three languages is set, it will continue to appear. However, when shifting to the next day, the other languages appear temporarily.

- **INSTANT DAY OR DATE SETTING**

Once every 24 hours the day and/or date changes automatically around midnight or as otherwise specified. However, direct instantaneous changes can be made manually by simple manipulation of the crown as shown.

- **HI-BEAT WATCHES**

Hi-Beat watches have 28,800 frequency per hour movements, and are certified for outstanding accuracy. This accuracy results from watch mechanism stability directly proportional to the balance frequency. Hi-Beat watches are therefore less affected by shocks and arm-wrist movements than ordinary watches, and consequently keep time more accurately.

- **SYNCHRONIZED SECOND SETTING DEVICE**

The sweep second hand stops when the crown is pulled out and resumes moving when the crown is returned to the NORMAL position. By pulling the crown out and pushing it back to NORMAL in coordination with a time signal, it is possible to set the sweep center hand to the exact second.

- **AUXILIARY HAND WINDING**

Manual winding in addition to self-winding.

- **ROTATING ELAPSED TIME BEZEL**

The "▼" mark on the rotating bezel can be turned to mark the position of the minute or hour hand. This permits exact calculation of the elapsed time.

- **HARDLEX CRYSTAL**

A special mar-resist crystal on specified models.

## MECHANICAL WATCHES

### HOW TO START THE SEIKO AUTOMATIC WATCH


Seiko's automatic mechanism winds the mainspring automatically through normal arm-wrist movement. No hand winding is required to run the watch. But to start the watch for the first time, hold it as shown in the drawing and swing it in a horizontal arc for about 30 seconds. This is sufficient to start the watch running before putting it on your wrist. (It should, however, be noted that most Seiko self-winding watches cannot be wound by hand unless specified as auxiliary hand winding.)



#### 54 SERIES — (Cal. 6106)

##### Features:


- 17J self-winding day-date
- Instant day-date change
- Bilingual English-Spanish calendar
- Synchronized second setting
- 98.2 ft. water tested

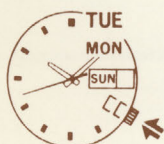

**1. TO SET THE DAY**—Push the crown in repeatedly (hard) to the second click until the desired day appears (while setting, the date changes at the same time). (as illustrated)



**2. TO SET THE DATE**—Push the crown in repeatedly lightly (about half way) to the first click. (as illustrated)

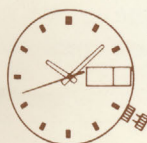

**3. TO SET THE TIME**—Pull the crown out to the first click and set the time, paying special attention to A.M. and P.M. (as illustrated)

ZM  
ZP  
SERIES  
60127M

FEA-  
TURES  
54  
SERIES

CD  
CM  
CN  
SERIES

55029  
58  
AC  
SERIES

CP  
CR  
CT  
CZ  
SERIES

AH  
SERIES

DA  
YQ  
YR  
SERIES

AJ  
AV  
SERIES

CQ  
CX  
SERIES

BX  
BY  
SERIES

CY  
DB  
SERIES

BZ  
CV  
CW  
SERIES

BRACE-  
LET  
ADJUST-  
MENT


DC  
DE  
YP  
ZH  
SERIES

SERVIC-  
ING  
PROCE-  
DURES

## 55029—DEEP SEA DIVER — (Cal. 6105)


### Features:

- 17J self-winding calendar
- Instant date change
- Synchronized second setting
- Lock type crown
- Rotating elapsed timing bezel
- 492 ft. water tested

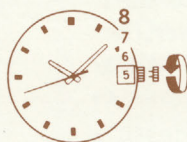


**1. TO SET THE DATE**—Pull the crown out halfway only—to the first click—and turn it backward for “instant” date setting. (as illustrated)

---

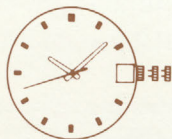

**2. TO SET THE TIME**—Pull out the crown all the way to the second click, and reset the hands to the correct time, paying special attention to A.M. and P.M. (as illustrated)

---

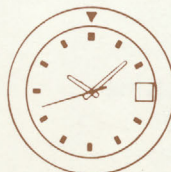


**3. ROTATING BEZEL**—The “▼” mark on the rotating bezel can be turned to mark the position of the minute or hour hand. This permits exact calculation of the elapsed time during skin diving. (see illustration)

---

## 58 SERIES — (Cal. 5606)


### Features:

- 23J self-winding day-date
- Auxiliary hand winding
- Instant day-date change
- Bilingual English-Spanish calendar
- Synchronized second setting
- 98.2 ft. water tested

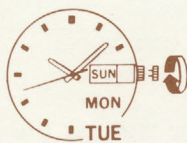


**1. TO SET THE DAY**—Pull the crown out all the way to the second click and set the hands between 3 A.M. and 8 P.M. Then, push the crown in halfway only, to the first click. Then turn the crown forward until the desired day appears. (see illustration)

---

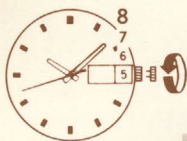

2. **TO SET THE DATE**—Repeat the same procedure as for day setting, except at the first click, turn the crown backward until the desired date appears. (as illustrated)

**NOTE:** When the hands are positioned in the range between 8 P.M. and 3 A.M., avoid the day and date correction to protect the calendar mechanism from damage.

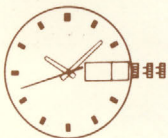


3. **TO SET THE TIME**—Pull out the crown all the way to the second click and reset the hands to the correct time, paying special attention to A.M. and P.M. (as illustrated)


## AC SERIES — (Cal. 7006)

### Features:


- 17J self-winding day-date
- Instant date change
- 98.2 ft. water tested

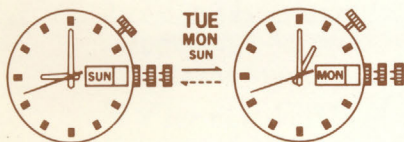

1. **TO SET THE DAY**—Pull out the crown to the second click and turn the hour hand to 1 A.M.; reverse the hour hand to 9 P.M. and turn again to 1 A.M. Repeat this forward-reverse process between 1 A.M. and 9 P.M. until the correct day appears. (as illustrated)

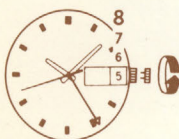

2. **TO SET THE DATE**—Pull out the crown halfway to the first click and turn the crown forward until the desired date appears. (as illustrated)

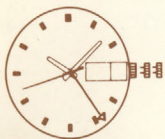

3. **TO SET THE TIME**—Pull the crown out to the second click and set the hands to the correct time, paying special attention to A.M. and P.M. (as illustrated)

ZM  
ZP  
SERIES  
60127M

CD  
CM  
CN  
SERIES

55029  
58  
AC  
SERIES

CP  
CR  
CT  
CZ  
SERIES

AH  
SERIES

DA  
YQ  
YR  
SERIES

AJ  
AV  
SERIES

CQ  
CX  
SERIES

BX  
BY  
SERIES

CY  
DB  
SERIES

BZ  
CV  
CW  
SERIES

BRACE-  
LET  
ADJUST-  
MENT


DC  
DE  
YP  
ZH  
SERIES

SERVIC-  
ING  
PROCE-  
DURES

## AH SERIES — (Cal. 6139)

### Features:


- 17J self-winding day-date chronograph
- Instant day-date change
- Bilingual English-Spanish calendar
- Synchronized second setting
- 30 minute recorder
- Stop-start push buttons
- Tachymeter timer bezel
- Rotating elapsed timing ring
- 98.2 ft. water tested

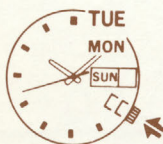

1. **TO SET THE DAY**—Push the crown in repeatedly (hard) to the second click until the desired day appears (while setting, the date changes at the same time). (as illustrated)



2. **TO SET THE DATE**—Push the crown in repeatedly (lightly) about halfway to the first click until the desired date appears. (as illustrated)

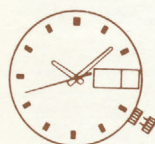


3. **TO SET THE TIME**—Pull the crown out to the first click and set the time, paying special attention to A.M. and P.M. (as illustrated)

### HOW TO USE THE STOPWATCH DEVICE

1. Push Button A to start the stopwatch device (second hand and minute recorder). Minute recorder totals minutes elapsed, advancing minute by minute.
2. Stop the device by pushing Button A again and read the time. Successively pushing Button A permits accumulated time reading. To return the stopwatch hands to zero, push Button B.
3. These operations do not interfere with the time of the watch itself.

**IMPORTANT NOTE: DO NOT OPERATE PUSH BUTTONS UNDER WATER  
OR UNDER WET CONDITIONS**

### MODEL 1 (TACHYMETER)

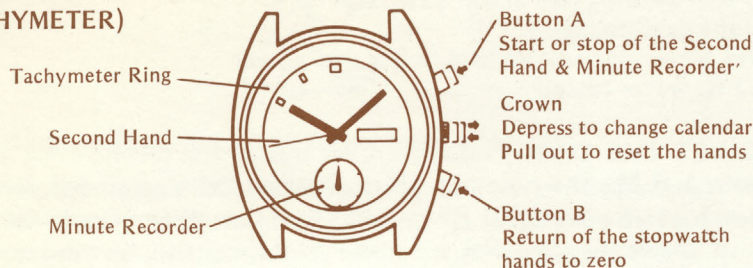

### HOW TO USE THE TACHYMETER

This automatic chronograph has a convenient device—the Tachymeter—for measuring hourly rate of any motion and hourly speed of a vehicle.


1. The Tachymeter can measure hourly speed of a vehicle from 60 to 500. Start stopwatch device when the vehicle starts and stop it when the vehicle finishes a one kilometer or one mile run. The second hand indicates the average hourly speed on a tachymeter scale. When a vehicle runs one kilometer or one mile in 30 seconds, the second hand indicates 120 on the tachymeter scale, that is, the average speed of the vehicle is 120 kilometers or 120 miles per hour.

2. To measure hourly rate of any motion, count the elapsed time to accomplish one cycle of the operation. The figure indicated by the second hand is the hourly rate of the motion. If a printing machine takes 30 seconds to print 500 copies of newspapers, the second hand indicates 120 on the tachymeter scale, that is, the average printing capacity of this machine is 60,000 (120 x 500) copies per hour.

### MODEL 2 (TACHYMETER)

1. The speed range of the tachymeter starts from 250 and ends at 50. Therefore, read the red zone after 60 seconds elapsed from start.

2. Total of time spent can be measured up to 60 minutes or 12 hours by setting "▼" mark of the rotating ring to the position of the minute or hour hand when the stopwatch starts.

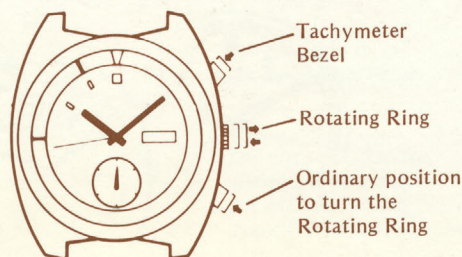

ZM  
ZP  
SERIES  
60127M

CD  
CM  
CN  
SERIES

CP  
CR  
CT  
CZ  
SERIES

AH  
SERIES

DA  
YQ  
YR  
SERIES

AJ  
AV  
SERIES

CQ  
CX  
SERIES

BX  
BY  
SERIES

CY  
DB  
SERIES

BZ  
CV  
CW  
SERIES

BRACE-  
LET  
ADJUST-  
MENT

DC  
DE  
YP  
ZH  
SERIES

SERVIC-  
ING  
PROCED-  
URES

## AJ SERIES — (Cal. 4006)


### Features:

- 17J self-winding bell alarm day-date
- Instant date change
- Hand winding alarm assures bell alarm power
- 98.2 ft. water tested

1. **TO SET THE DAY**—Pull the crown out to the second click and turn the hands to 1 A.M., the point at which the day dial is advanced. Reverse hands counterclockwise to 9:30 P.M., and then turn them clockwise to 1 A.M. again to cause the day dial to advance. Repeat this forward-and-backward step until the correct day appears. (as illustrated)

2. **TO SET THE DATE**—Depress the bell button (above crown) repeatedly until the desired date appears.


3. **TO SET THE TIME**—Pull the crown out to the second click and set the time, paying special attention to A.M. and P.M. (as illustrated)

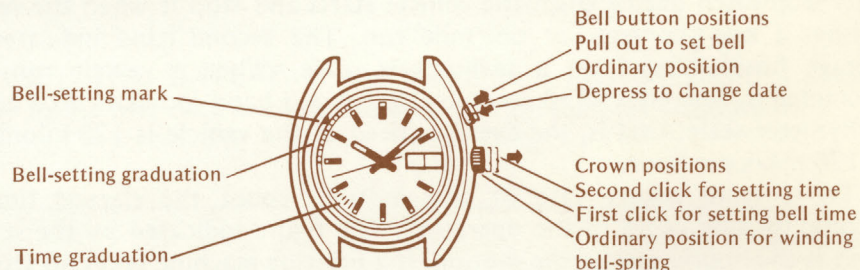

### TO SET THE BELL


1. First, make sure the bell button is pushed in to the ordinary position. Wind the bell spring fully by turning the crown at the normal position.
2. Next, set the bell-setting mark to the desired time. Pull the crown to the first click and turn counterclockwise until the bell-setting mark is set to the desired time. The minute track is printed at ten minute intervals, when setting the bell:

A) Count the minute track of the bell-setting graduation clockwise from the hour marker to the bell setting mark. (as illustrated)

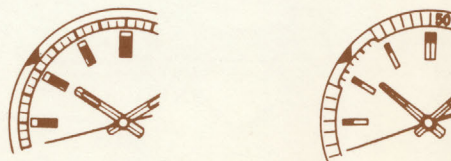

Continued

B) Count the minute-track on the bell-setting ring counterclockwise from the bell-setting mark to the hour marker.

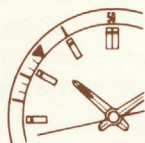

After setting, push the crown in to the normal position.

NOTE: When the figures on the bell-setting dial are printed clockwise, you can know the elapsed minutes after bell-ringing. If they are printed counterclockwise, you can count the minutes left till the bell-ringing time.

3. Finally, set the bell. Pull out the bell button to the pulled-out position. The watch is now ready to sound as soon as the indicated time is reached.

**TO STOP THE BELL**—Push the bell button back to the regular position. Do not depress it too firmly or it will cause a date change.

## AV SERIES — (Cal. 6138)


### Features:

- 21J self-winding chronograph day-date
- Auxiliary hand winding
- Instant day-date change
- Bilingual English-Spanish calendar
- Synchronized second setting
- 12 hour and 60 minute recorder
- Stop-start push buttons
- Tachymeter timer bezel as specified
- 98.2 ft. water tested

1. **TO SET THE DAY**—Pull the crown out halfway only to the first click and turn it forward until the desired day appears. (as illustrated)

2. **TO SET THE DATE**—Repeat the same procedure as for day setting, except at the first click, turn the crown backward until the desired date appears. (as illustrated)

3. **TO SET THE TIME**—Pull out the crown all the way to the second click and reset the hands, paying special attention to A.M. and P.M. (as illustrated)

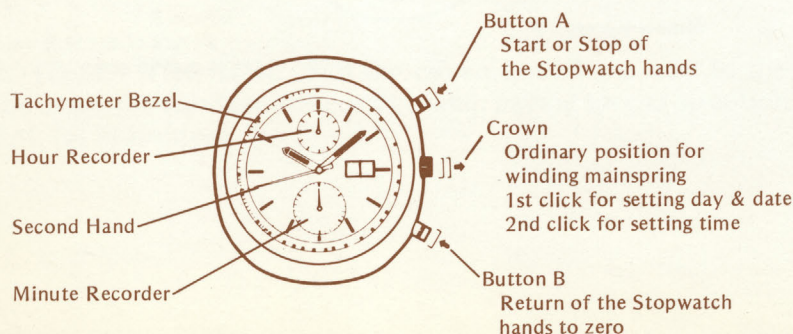


## HOW TO USE THE STOPWATCH DEVICE

1. Push Button A to start the stopwatch device (second hand and hour and minute recorders). Minute recorder totals minutes elapsed, advancing minute by minute. The orange colored zone of the hour recorder indicates the former half of an hour so as to know the elapsed time easily.
2. Stop the device by pushing Button A again and read the scale. Successive depressing of Button A permits accumulated time reading. To return the stopwatch hands to zero, push Button B after the device is stopped.
3. These operations do not interfere with the time of the watch itself.

**IMPORTANT NOTE: DO NOT OPERATE PUSH BUTTONS UNDER WATER OR UNDER WET CONDITIONS.**

## FOR TACHYMETER MODEL ONLY HOW TO USE TACHYMETER


1. The Tachymeter can measure hourly speed of a vehicle from 60 to 500 kilometers (or miles). Start the stopwatch device when the vehicle starts and stop it when the vehicle finishes a one kilometer or one mile run. The second hand indicates the average hourly speed on a tachymeter scale. When a vehicle runs one kilometer or one mile in 30 seconds, second hand indicates 120 on the tachymeter scale, that is, the average speed of the vehicle is 120 kilometers or 120 miles per hour.
2. To measure hourly rate of any motion, count the elapsed time to accomplish one cycle of the operation. The figure indicated by the second hand is the hourly rate of the motion. If a printing machine takes 30 seconds to print 500 copies of newspapers, the second hand indicates 120 on the tachymeter scale, that is, average printing capacity of the machine is 60,000 (120 x 500) copies per hour.

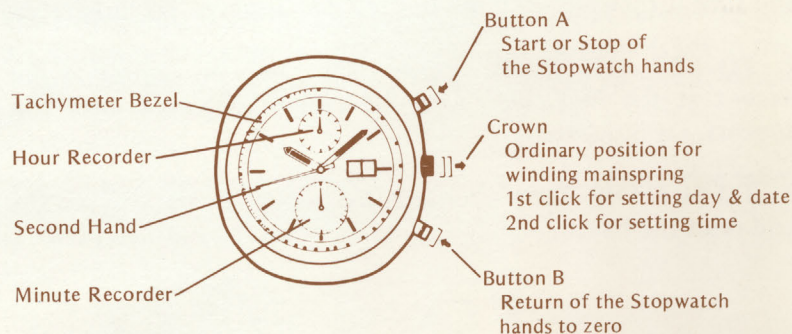


## BX SERIES — (Cal. 2409)

### Features:


- 23J self-winding day-date
- Hi-beat movement
- Auxiliary hand winding
- Instant day-date change
- Bilingual English-Spanish calendar
- 98.2 ft. water tested

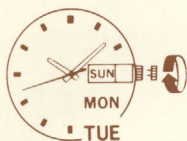

1. **TO SET THE DAY**—Pull the crown out to the first click and turn forward until the desired day appears. (as illustrated)

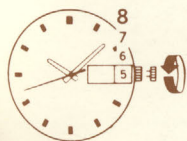

2. **TO SET THE DATE**—Repeat the same procedure as for day setting except at the first click, turn the crown backward until the desired date appears. (as illustrated)

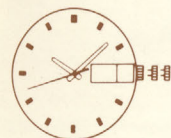


3. **TO SET THE TIME**—Pull the crown out all the way to the second click and reset the hands to the correct time paying special attention to A.M. and P.M. (as illustrated)


## BY SERIES — (Cal. 2418)

### Features:

- 23J self-winding calendar
- Hi-beat movement
- Auxiliary hand winding
- Instant date change

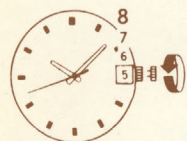

1. **TO SET THE DATE**—Pull the crown out halfway only to the first click and turn backward until the desired date appears. (as illustrated)

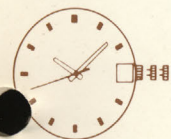

2. **TO SET THE TIME**—Pull the crown out all the way to the second click and reset the hands to the correct time, paying special attention to A.M. and P.M. (as illustrated)

ZM  
ZP  
SERIES  
60127M

CD  
CM  
CN  
SERIES

CP  
CR  
CT  
CZ  
SERIES

DA  
YQ  
YR  
SERIES

CQ  
CX  
SERIES

BX  
BY  
SERIES

CY  
DB  
SERIES

BZ  
CV  
CW  
SERIES

BRACE-  
LET  
ADJUST-  
MENT


DC  
DE  
YP  
ZH  
SERIES

SERVIC-  
ING  
PROCED-  
URES

## BZ SERIES — (Cal. 7016)

### Features:

- 17J self-winding day-date chronograph
- Instant day-date change
- Bilingual English-Spanish calendar
- Synchronized second setting
- 12-hour and minute recorder
- Stop-start push buttons
- 98.2 ft. water tested

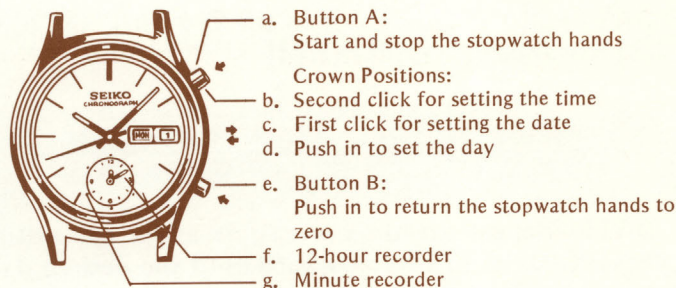

1. **TO SET THE TIME**—Pull the crown out all the way to the second click and set the time. Then push the crown in.

2. **TO SET THE DATE**—Pull the crown out to the first click and turn it backwards. Then push the crown in.

3. **TO SET THE DAY**—Push the crown in repeatedly.

4. **TO SET THE SECOND HAND**—Push Button A to stop the second hand. Push Button A again to re-start the second hand at the exact time desired.

### 5. TO USE THE STOPWATCH DEVICE

a. To Operate the Stopwatch Device—Push Button A to start stopwatch operation; push it again to stop. (NOTE: Pushing Button A also activates the sweep center hand for normal use.) To return the second hand to zero, push Button B. If you push Button B when the second hand is moving, the second hand will return to zero and start moving again instantaneously as soon as the button is released.


b. To Calculate Accumulated Time—The stopwatch device consists of a second hand and a time recorder with both the minute and hour hands. The minute and hour hands advance automatically with the second hand. To read the elapsed time, push Button A to stop stopwatch operation and read from the proper dials.

NOTE: These operations do not interfere with the watch's regular time-keeping functions. The time recorder's minute hand covers 30 minutes in one rotation, while the hour hand covers 12 hours in one rotation.

## CV SERIES — (Cal. 6109)

### Features:


- 17J self-winding day-date
- Instant day-date change
- 98.2 ft. water tested

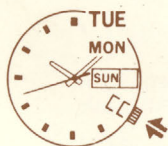

1. **TO SET THE DAY**—Push the crown in repeatedly (hard) to the second click until the desired day appears (while setting, the date changes at the same time). (as illustrated)



2. **TO SET THE DATE**—Push the crown in repeatedly lightly (about half way) to the first click. (as illustrated)

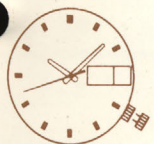


3. **TO SET THE TIME**—Pull the crown out to the first click and set the time, paying special attention to A.M. and P.M. (as illustrated)


## CW SERIES — (Cal. 7009)

### Features:


- 17J self-winding day-date
- 98.2 ft. water tested
- Instant day-date change

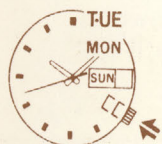

1. **TO SET THE DAY**—Push the crown in repeatedly. (as illustrated)

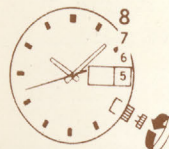

2. **TO SET THE DATE**—Pull the crown out to the first click and turn it backward, then push the crown in. (as illustrated)

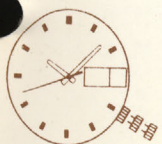

3. **TO SET THE TIME**—Pull the crown out to the second click and set the hands to the correct time, paying special attention to the A.M. and P.M. (as illustrated)

ZM  
ZP  
SERIES  
60127M

CD  
CM  
CN  
SERIES

CP  
CR  
CT  
CZ  
SERIES

DA  
YQ  
YR  
SERIES

CQ  
CX  
SERIES

CY  
DB  
SERIES

BZ  
CV  
CW  
SERIES

BRACE-  
LET  
ADJUST-  
MENT


DC  
DE  
YP  
ZH  
SERIES

SERVIC-  
ING  
PROCE-  
DURES


## DC SERIES — (Cal. 7025)

### Features:

- 17J self-winding calendar
- Instant date change
- 98.2 ft. water tested

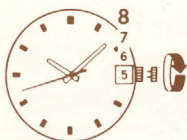

**1. TO SET THE DATE**—Pull the crown out halfway only—to the first click—and turn it backward for “instant” date setting. (as illustrated)

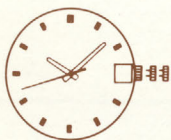


**2. TO SET THE TIME**—Pull out the crown all the way to the second click, and reset the hands to the correct time, paying special attention to A.M. and P.M. (as illustrated)


## DE SERIES — (Cal. 6309)

### Features:


- 17J self-winding day-date
- Instant day-date change
- Bilingual English-Spanish calendar
- 98.2 ft. water tested

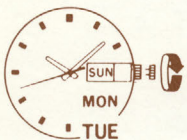

**1. TO SET THE DAY**—Pull the crown out all the way to the second click and set the hands between 3 A.M. and 8 P.M. Then push the crown in halfway only, to the first click. Then turn the crown backward until the desired day appears. (as illustrated)

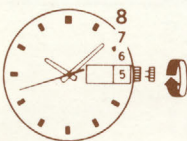

**2. TO SET THE DATE**—Repeat the same procedure as for day setting, except at the first click, turn the crown forward until the desired date appears. (as illustrated)

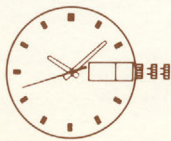


**3. TO SET THE TIME**—Pull out the crown all the way to the second click and reset the hands to the correct time, paying special attention to A.M. and P.M. (as illustrated)

**NOTE:** When the hands are positioned between 8 P.M. and 3 A.M., avoid the day and date correction to protect the calendar mechanism from damage.


## YP SERIES — (Cal. 2906)

### Features:


- 17J self-winding day-date
- Instant day-date change
- Bilingual English-Spanish calendar
- Hi-beat movement
- Auxiliary hand winding
- 98.2 ft. water tested

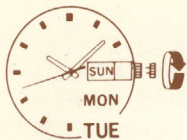

1. **TO SET THE DAY**—Pull the crown all the way to the second click and set the hands between 3 A.M. and 8 P.M. Then push the crown in halfway only, to the first click. Then turn the crown backward until the desired day appears. (as illustrated)

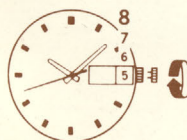

2. **TO SET THE DATE**—Repeat the same procedure as for day setting, except at the first click, turn the crown forward until the desired date appears. (as illustrated)

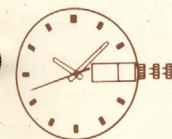


3. **TO SET THE TIME**—Pull out the crown all the way to the second click and reset the hands to the correct time, paying special attention to A.M. and P.M. (as illustrated)

**NOTE:** When the hands are positioned between 8 P.M. and 3 A.M., avoid the day and date correction to protect the calendar mechanism from damage.


## ZH SERIES — (Cal. 2206)

### Features:


- 17J self-winding day-date
- Hi-beat movement
- Auxiliary hand winding
- Instant day-date change
- Bilingual English-Spanish calendar
- 98.2 ft. water tested

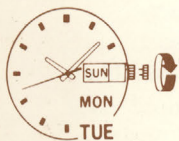

1. **TO SET THE DAY**—Pull the crown out halfway only to the first click and turn backward until the desired day appears. (as illustrated)

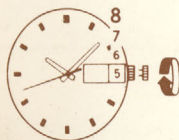

2. **TO SET THE DATE**—Repeat the same procedure as for day setting, except at the first click, turn the crown forward until the desired date appears. (as illustrated)

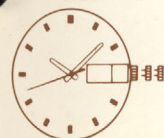

3. **TO SET THE TIME**—Pull the crown all the way to the second click and reset the hands to the correct time, paying special attention to A.M. and P.M. (as illustrated)

ZM  
ZP  
SERIES  
60127M

CD  
CM  
CN  
SERIES

CP  
CR  
CT  
CZ  
SERIES

DA  
YQ  
YR  
SERIES

CQ  
CX  
SERIES

CY  
DB  
SERIES

BRACE-  
LET  
ADJUST-  
MENT


DC  
DE  
YP  
ZH  
SERIES

SERVIC-  
ING  
PROCE-  
DURES


## ZM SERIES — (Cal. 2202)

### Features:

- 17J hand winding calendar
- Hi-beat movement
- Instant date change

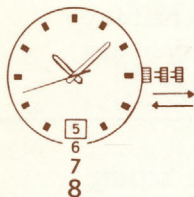

**1. TO SET THE DATE**—Pull the crown out to the first click position. Then, pull the crown out repeatedly to the second click until the desired date appears. After setting the date, push the crown back to the normal position. (as illustrated)

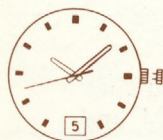


**2. TO SET THE TIME**—Pull the crown out to the first click and reset the hands to the correct time, paying special attention to A.M. and P.M. (as illustrated)

## ZP SERIES — (Cal. 2205)

### Features:

- 17J self-winding calendar
- Hi-beat movement
- Auxiliary hand winding
- Instant date change
- Rotating elapsed timing bezel as specified
- Water tested as specified.

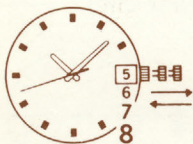


**1. TO SET THE DATE**—Pull the crown out to the first click position. Then pull the crown out repeatedly to the second click until the desired date appears. After setting the date, push the crown back to the normal position. (as illustrated)



**2. TO SET THE TIME**—Pull the crown out to the first click and reset the hands to the correct time, paying special attention to A.M. and P.M. (as illustrated)

Features:

- Quartz crystal dual-zone timer
- Instant date change
- Synchronized second setting
- Independently-set additional hour indicator for displaying the time in another time zone

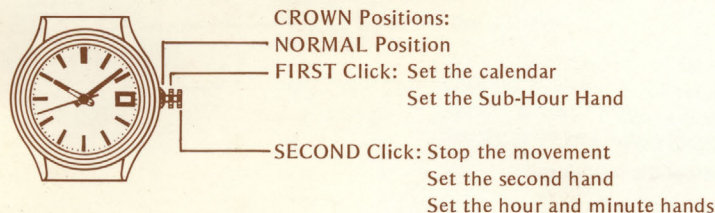

**1. TO SET THE DATE**—Pull the crown out halfway only to the first click and turn the crown forward until the desired date appears.

**2. TO SET THE TIME**—Pull the crown out all the way to the second click and reset the hands by first setting the minute hand to a properly advanced time (i.e. past the correct time), then return the minute hand to the correct time by turning it counterclockwise. **NOTE:** the second hand always stops at even numbered seconds when the crown is pulled out to the second click. It resumes moving when the crown is returned to the normal position, thereby, in accordance with a time signal, it is then possible to set the second hand to the exact second. (as illustrated)


**3. TO SET THE SUB-HOUR HAND**—Pull the crown out to the first click and turn it counterclockwise. Then push the crown in.

When you set the sub-hour hand, rotate it by the time difference within 12 hours between the two places you want to refer to, since the sub-hour hand moves at one-hour intervals. The calendar changes in coordination with the ordinary hour hand and not with the sub-hour hand. (as illustrated)

## CD SERIES — (Cal. 3923)

### Features:

- Quartz crystal day-date
- Instant day-date change
- Bilingual English-Spanish calendar
- Synchronized second setting
- Pulsating power indicator light

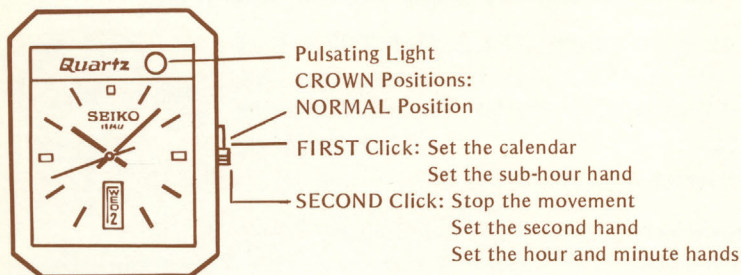

**1. TO SET THE DAY**—Pull the crown out halfway only to the first click and turn it backward until the desired day appears.

**2. TO SET THE DATE**—Repeat the same procedure as for day setting, except at the first click, turn the crown forward until the desired date appears.


**3. TO SET THE TIME**—Pull the crown out all the way to the second click and reset the hands by first setting the minute hand to a properly advanced time (i.e. past the correct time), then return the minute hand to the correct time by turning it counterclockwise. **NOTE:** The second hand always stops at every second when the crown is pulled out to the second click. It resumes moving when the crown is returned to the normal position, thereby, in accordance with a time signal, it is then possible to set the second hand to the exact second. (as illustrated)

**4. PULSATING POWER INDICATOR LIGHT**—Cal. 3923 has a unique Pulsating Power Indicator Light on the dial. This light emitting diode pulsates each second in synchronization with the movement of the second hand. The flashing, indicating that energy is being supplied by the batteries which control the watch movement, will intermittently go on at intervals of one second for a period exceeding one full year. The flashing will cease completely about one to two weeks before the batteries run out, and the watch will stop. Consequently, the Pulsating Power Indicator Light serves as a continuous indicator showing that the batteries are in good condition, and provides the owner with sufficient advance notice before the batteries terminate.

## CM SERIES — (Cal. 0903)

### Features:

- Quartz crystal—day-date
- Instant day-date change
- Trilingual English-Spanish-French calendar
- Synchronized second setting
- 98.2 ft. water tested

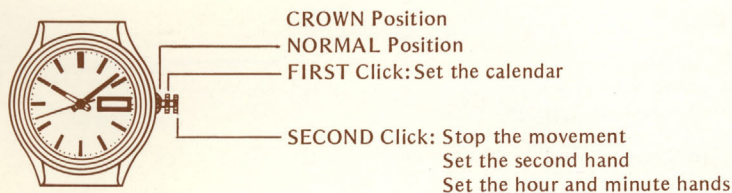

1. **TO SET THE DAY**—Pull the crown out halfway only to the first click, and turn it backward until the desired day appears.


2. **TO SET THE DATE**—Repeat the same procedure as for day setting, except at the first click, turn the crown forward until the desired date appears.

3. **TO SET THE TIME**—Pull the crown out all the way to the second click and reset the hands by first setting the minute hand to a properly advanced time (i.e. past the correct time), then return the minute hand to the correct time by turning it counterclockwise. **NOTE:** the second hand always stops at even numbered seconds when the crown is pulled out to the second click. It resumes moving when the crown is returned to the normal position, thereby, in accordance with a time signal, it is then possible to set the second hand to the exact second. (as illustrated)

## CN SERIES — (Cal. 4110)

### Features:

- Ultra-thin dress quartz crystal

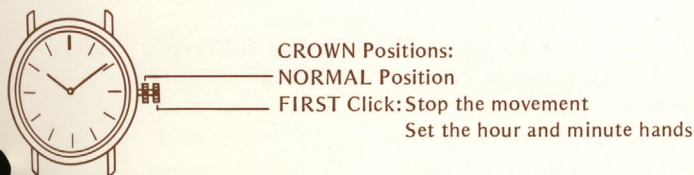

**TO SET THE TIME**—Pull the crown out to the first click. **NOTE:** When the time is set, first set the minute hand to a properly advanced time (i.e. past the correct time), then return the minute hand to the correct time by turning it counterclockwise. (as illustrated)

CD  
CM  
CN  
SERIES

CP  
CR  
CT  
CZ  
SERIES

DA  
YQ  
YR  
SERIES

CQ  
CX  
SERIES

CY  
DB  
SERIES

BRACE-  
LET  
ADJUST-  
MENT

SERVIC-  
ING  
PROCE-  
DURES

## CP SERIES — (Cal. 3883)

### Features:

- Quartz crystal—day-date
- Instant day-date change
- Bilingual English-Spanish calendar
- Synchronized second setting
- Accurate to within one second per month



CROWN Positions:

NORMAL Position

FIRST Click: Set the calendar

SECOND Click: Stop the movement

Set the second hand

Set the hour and minute hands

**1. TO SET THE DAY**—Pull the crown out halfway only to the first click and turn it backward until the desired day appears.

**2. TO SET THE DATE**—Repeat the same procedure as for day setting, except at the first click, turn the crown forward until the desired date appears.

**3. TO SET THE TIME**—Pull the crown out all the way to the second click and reset the hands by first setting the minute hand to a properly advanced time (i.e., past the correct time), then return the minute hand to the correct time by turning it counterclockwise. **NOTE:** the second hand always stops at even numbered seconds when the crown is pulled out to the second click. It resumes moving when the crown is returned to the normal position, thereby, in accordance with a time signal, it is then possible to set the second hand to the exact second. (as illustrated)

---

## CR SERIES — (Cal. 4100)

### Features:

- Ultra-thin dress quartz crystal
- Synchronized second setting



CROWN Positions:

NORMAL Position

FIRST Click: Set the calendar


Set the Sub-Hour Hand

**1. TO SET THE TIME**—Pull the crown out to the first click and reset the hands by first setting the minute hand to a properly advanced time (i.e. past the correct time), then return the minute hand to the correct time by turning it counterclockwise. **NOTE:** the second hand always stops at even numbered seconds when the crown is pulled out to the first click. It resumes moving when the crown is returned to the normal position, thereby, in accordance with a time signal, it is then possible to set the second hand to the exact second. (as illustrated)

## CT SERIES — (Cal. 0843)

### Features:

- Quartz crystal—day-date
- Instant day-date change
- Bilingual English-Spanish calendar
- Synchronized second setting
- 98.2 ft. water tested

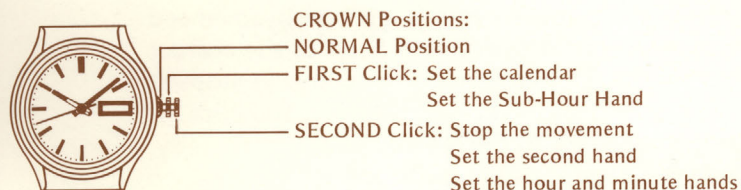

1. **TO SET THE DAY**—Pull the crown out halfway only to the first click and turn it forward until the desired day appears.

2. **TO SET THE DATE**—Repeat the same procedure as for day setting, except at the first click, turn the crown backward until the desired date appears.


3. **TO SET THE TIME**—Pull the crown out all the way to the second click and reset the hands by first setting the minute hand to a properly advanced time (i.e. past the correct time), then return the minute hand to the correct time by turning it counterclockwise. **NOTE:** the second hand stops at every second when the crown is pulled out to the second click. It resumes moving when the crown is returned to the normal position, thereby, in accordance with a time signal, it is then possible to set the second hand to the exact second. (as illustrated)

## CZ SERIES — (Cal. 4633)

### Features:

- Quartz crystal—day-date
- Instant day-date change
- Bilingual English-Spanish calendar
- Synchronized second setting
- 98.2 ft. water tested
- Second hand serves as battery life indicator. When second hand moves

in two-second intervals instead of the normal one-second interval, this indicates that the battery life will expire in 7 to 10 days. However, accurate time will be maintained during this remaining period.

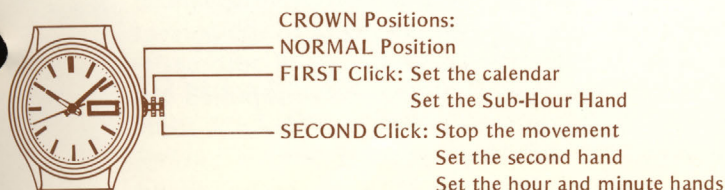

CP  
CR  
CT  
CZ  
SERIES

DA  
YQ  
YR  
SERIES

CQ  
CX  
SERIES

CY  
DB  
SERIES

BRACE-  
LET  
ADJUST-  
MENT

SERVIC-  
ING  
PROCE-  
DURES

1. **TO SET THE DAY**—Pull the crown out halfway only to the first click and turn it backward until the desired day appears.

2. **TO SET THE DATE**—Repeat the same procedure as for day setting, except at the first click, turn the crown forward until the desired date appears.


3. **TO SET THE TIME**—Pull the crown out all the way to the second click and reset the hands by first setting the minute hand to a properly advanced time (i.e. past the correct time), then return the minute hand to the correct time by turning it counterclockwise. **NOTE:** the second hand always stops at even numbered seconds when the crown is pulled out to the second click. It resumes moving when the crown is returned to the normal position, thereby, in accordance with a time signal, it is then possible to set the second hand to the exact second. (as illustrated)

---

### DA SERIES — (Cal. 4823)

#### Features:

- Quartz crystal — day-date
- Instant day-date change
- Bilingual English-Spanish calendar
- Synchronized second setting
- 98.2 ft. water tested
- Rapid advance second setting system automatically moves second hand to the next ten-second mark when crown is pulled out.
- Second hand serves as battery life indicator. When second hand moves in two-second intervals instead of the normal one-second interval, this indicates that the battery life will expire in 7 to 10 days. However, accurate time will be maintained during this remaining period.

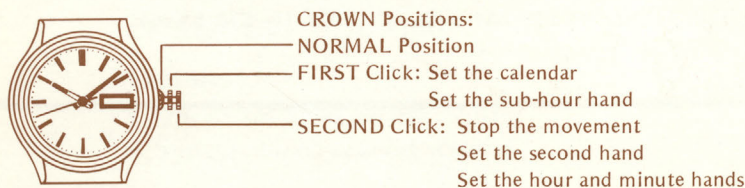

1. **TO SET THE DAY**—Pull the crown out halfway only to the first click and turn it backward until the desired day appears.


2. **TO SET THE DATE**—Repeat the same procedure as for day setting, except at the first click, turn the crown forward until the desired date appears.

3. **TO SET THE TIME**—Pull the crown out all the way to the second click and reset the hands by first setting the minute hand to a properly advanced time (i.e. past the correct time), then return the minute hand to the correct time by turning it counterclockwise. **NOTE:** the second hand will automatically advance to the next 10th second position when the crown is pulled out to the second click. Example: 10, 20, 30, etc., to facilitate setting the time. It resumes moving when the crown is returned to the normal position, thereby, in accordance with a time signal, it is then possible to set the second hand to the exact second. (as illustrated)

## YQ SERIES — (Cal. 4303)

### Features:

- Quartz crystal—day-date
- Instant day-date change
- Bilingual English-Spanish calendar
- Synchronized second setting
- 98.2 ft. water tested

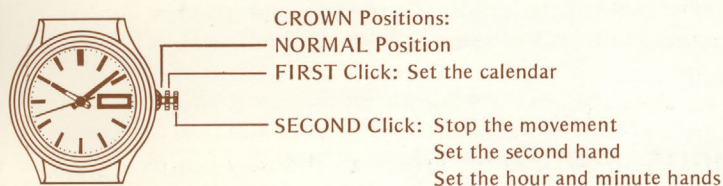

1. **TO SET THE DAY**—Pull the crown out halfway only to the first click and turn it backward until the desired day appears.

2. **TO SET THE DATE**—Repeat the same procedure as for day setting, except at the first click, turn the crown forward until the desired date appears.


3. **TO SET THE TIME**—Pull the crown out all the way to the second click and reset the hands by first setting the minute hand to a properly advanced time (i.e. past the correct time), then return the minute hand to the correct time by turning it counterclockwise. **NOTE:** the second hand always stops at even numbered seconds when the crown is pulled out to the second click. It resumes moving when the crown is returned to the normal position, thereby, in accordance with a time signal, it is then possible to set the second hand to the exact second. (as illustrated)

---

## YR SERIES — (Cal. 4300)

### Features:

- Ladies' ultra-thin quartz crystal

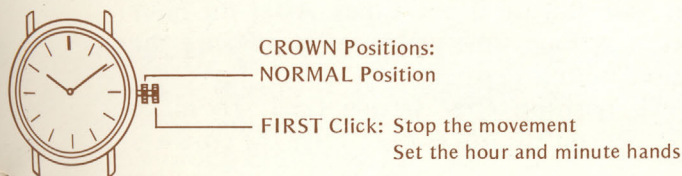

**TO SET THE TIME**—Pull the crown out to the first click. **NOTE:** when the time is set, first set the minute hand to a properly advanced time (i.e. past the correct time), then return the minute hand to the correct time by turning it counterclockwise. (as illustrated)

DA  
YQ  
YR  
SERIES

CQ  
CX  
SERIES

CY  
DB  
SERIES


BRACE-  
LET  
ADJUST-  
MENT

SERVIC-  
ING  
PROCE-  
DURES

## CQ SERIES — (Cal. 0624)

### Features:

- Liquid crystal quartz digital (continuous readout of hour, minute, and seconds)
- Built-in illumination system

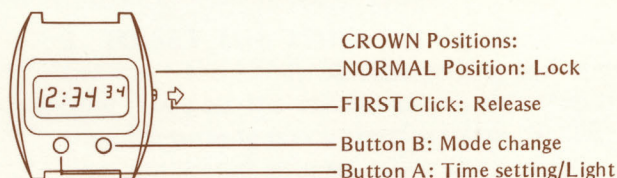

**1. TO SET THE SECONDS DIGITS**—First, pull the crown all the way out to set the time. The seconds digits immediately start flashing when the crown is pulled all the way out. This indicates that the seconds digits are ready to be changed manually. When Button A is then depressed in accordance with a time signal, it automatically causes the seconds digits to return to 00.

**NOTE:** When the seconds digits indicate any numbers from 01 to 29 the digits are reset automatically whenever Button A is depressed. When digits 30-59 are displayed and Button A is depressed, one minute is added and the seconds digits immediately return to 00 again.

**2. TO SET THE MINUTE DIGITS**—While the seconds digits are flashing, depress Button B. The minute digits will then immediately start flashing. This indicates that the minute digits are ready to be changed manually. Each depression of Button A will then advance the minute digits one minute until the desired minute display is shown.

**3. TO SET THE HOUR DIGITS**—While the minute digits are flashing, depress Button B again. The hour digits will then start flashing. This now indicates that the hour digits are ready to be changed manually.

By depressing Button A, the hour digits are advanced one hour. Each depression of Button A will then advance the hour digits one hour to the desired time.

Be sure to push the crown in to the normal position each time after setting the time.

When you want to set only the minute or the hour, you can adjust it independently from the other two timekeeping indicators.

For example, if you are travelling and need to adjust the hour, first pull the crown all the way out and then push Button B two times. After the hour digits start flashing, depress Button A each time you want to advance the hour digits one hour until the desired hour is reached.

Push the crown in to the normal position after setting time. To make changes in the minute digits only, depress Button B once after the crown is pulled all the way out.

The minute digits then start flashing and can be changed as described above.

**4. TO USE THE LIGHT**—Button A serves both for setting the time and activating the tiny illuminating light. The light clearly illuminates the hour, minute and seconds digits in the dark.

When Button A is depressed, the light is activated. Button A activates the light only when the crown is at the normal position.


Continued

NOTE: The battery life will last over one year when the light button is pushed ten times a day (one second at a time). Unnecessary pushing of the light button may run the battery down in less than one year.

## CX SERIES — (Cal. 0634)

### Features:

- Liquid crystal quartz digital chronograph (continuous digital readout)
- Timekeeping mode shows hours, minutes, AM/PM, seconds indicator, and date
- Chronograph mode shows minutes, seconds, 1/10th second, elapsed time, and lap time with simultaneous timekeeping
- Built-in illumination system

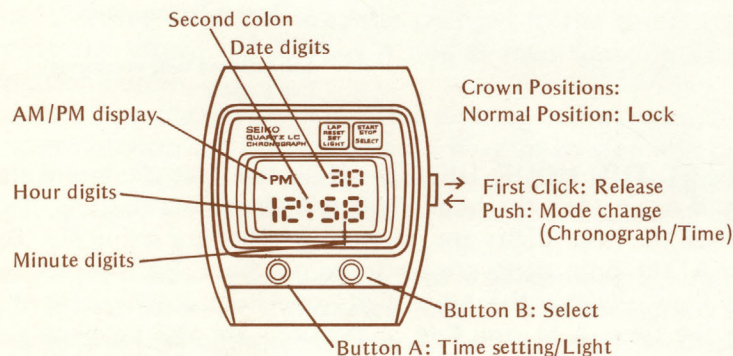

**1. TO SET THE SECONDS**—First, pull the crown all the way out to set the time. The seconds “colon” immediately starts flashing by ½ second intervals (flashing is repeated once a second under the normal condition) when the crown is pulled all the way out. This indicates that the seconds are ready to be changed manually. When Button A is then pushed, in accordance with a time signal, it automatically causes the seconds to return to 00. Although the seconds are not displayed in digits, they can be set accurately by this operation.

NOTE: When Button A is pushed, seconds will automatically reset to 00 if depressed while seconds are between 01 and 29. If Button A is depressed while seconds are between 30 and 59, the time will advance to the next minute.

**2. TO SET THE DATE DIGITS**—With the crown pulled all the way out, push Button B and the date digits will immediately start flashing. This now indicates that the date digits are ready to be changed manually. By pushing Button A, the date digits are advanced one digit. Each depression of Button A will then advance the date digits until the desired date is reached.


Continued

CQ  
CX  
SERIES

CY  
DB  
SERIES

BRACE-  
LET  
ADJUST-  
MENT

SERVIC-  
ING  
PROCE-  
DURES

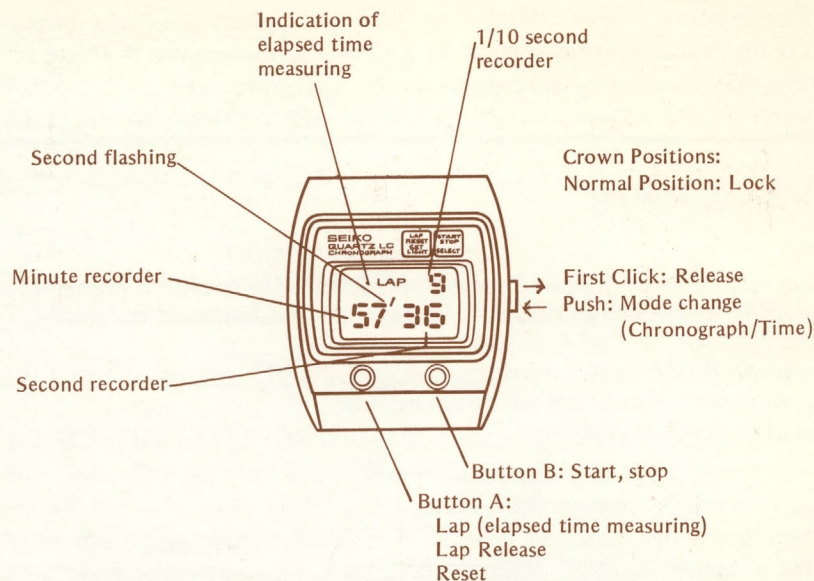

**3. TO SET THE HOUR DIGITS**—While the date digits are flashing, push Button B again, and the hour digits will then start flashing. This now indicates that the hour digits are ready to be changed manually. By depressing Button A, the hour digits are advanced one hour. Each depression of Button A will then advance the hour digits one hour to the desired time. When setting the time, A.M. and P.M. indications are also changed automatically. Please be sure that the time setting is made with A.M. or P.M. appropriately displayed.

(The date digits display can be set independently of the hour setting function and the date digits are not changed even if 12 P.M. is passed while setting the hour digits.)

**4. TO SET THE MINUTE DIGITS**—While the hour digits are flashing, push Button B. The minute digits will then immediately start flashing. This indicates that the minute digits are ready to be changed manually. Each depression of Button A will then advance the minute digits one minute until the desired minute display is shown.

(The minute digits can be set independently of the hour digits. The hour digits aren't changed even if 59 minutes is passed while setting the minute digits.)

Be sure to push the crown in to the normal position each time after you have finished setting the time. When the crown is at the normal position, the time display is not changed even if Button A or B is pushed when the watch is worn on a wrist.

**5. ADJUSTING THE DATE, HOUR AND MINUTE WHEN CHANGING TIME ZONES**—When you want to set only the date, hour or minute, you can adjust it independently of the other two timekeeping indicators. For example, if you are travelling and need to adjust the date, first pull the crown all the way out and then push Button B one time. After the date digits start flashing, push Button A each time you want to advance the date digits one date until the desired date is reached. Push the crown in to the normal position after setting the date. To make changes in the hour digits only, push Button B two times after the crown is pulled all the way out. To make changes in the minute digits only, push Button B three times after the crown is pulled all the way out. The hour or minute digits then start flashing and can be changed as described above.

**6. HOW TO USE THE CHRONOGRAPH DEVICE**—When the watch is indicating the time, the time display is instantly changed to the chronograph display by pushing the crown in. Buttons A and B then function as the chronograph operation button.

a. To Operate the Chronograph Device—After pushing in the crown, push Button B to start chronograph operation; push it again to stop and push Button A to reset the chronograph display back to zero. So long as Button B is pushed repeatedly, it is possible to accumulate the time being measured.

b. To Measure Elapsed Time—Push Button B to start chronograph operation; and push Button A when the elapsed time is to be measured. The time display stops and LAP appears in the upper left corner of the display after Button A is depressed. The time display then indicates the elapsed time. However, the second flashing mark continues to blink, indicating that the chronograph mechanism is still in operation. If Button A is pushed, while the static elapsed time is displayed, the display automatically returns to show the time being measured from when the chronograph function was first started.

Pushing Button B stops the chronograph operation, and pushing Button A causes the reset to return the indication to zero. If Button B is pushed during the measurement of an elapsed time, the chronograph operation stops, showing the static elapsed time. If Button A is pushed in this condition, the elapsed time display is extinguished and the watch displays the measured time from the start of the chronograph function up to the moment that Button B was pushed. Pushing Button A again resets the watch and indicates zero.

**NOTE:** Pushing the crown during the chronograph operation will change the display to show the date and time, and pushing the crown again will change the display to again indicate the time being measured by the chronograph function. There is no confusion between timekeeping and the chronograph device as each functions independently. When the chronograph device is to be used for a long time, it is recommended that the display be changed into the timekeeping mode (by pushing the crown in) to prevent pushing Button A and B by mistake during the time measurement. The crown can then be pushed in again when the time measurement is required.

CY  
DB  
SERIES


BRACE-  
LET  
ADJUST-  
MENT

SERVIC-  
ING  
PROCE-  
DURES

## CY SERIES — (Cal. 0124)

### Features:

- Liquid crystal quartz digital (continuous digital readout)
- Continuous readout in hours, minutes and 10-second units with day-date and AM/PM indicator
- Built-in illumination system

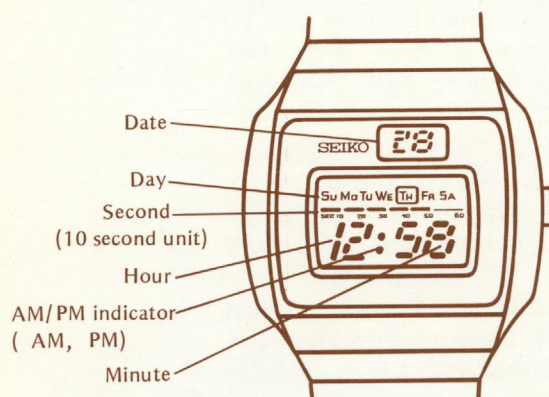


### Crown Positions:

Normal Position: Lock

First Click: Mode/set

Push: Light

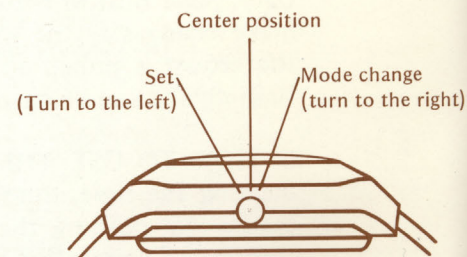

**1. TO SET THE DATE**—First, pull the crown all the way as if to set the time. Then turn the crown to the right. Now only the date and seconds are indicated and the other indications are extinguished. The dates are changed successively when the crown is turned to the left. When the desired date appears, return the crown to the center position. Leave the crown out . . .

**2. TO SET THE DAY OF THE WEEK**—By next turning the crown to the right, only the day of the week and the seconds are indicated and the other indications are extinguished. The day of the week is indicated in the square frame. The day of the week is changed successively when the crown is turned to the left. When the desired day appears, return the crown to the center position. Leave the crown out . . .

**3. TO SET THE HOUR DIGITS**—By next turning the crown to the right again, only the hour and the seconds are indicated and the other indications are extinguished. The hour is changed successively when the crown is turned to the left. When the desired time appears, return the crown to the center position.

**NOTE:** When setting the hours, A.M. and P.M. indications are also changed automatically. Please be sure that the time setting is made with A.M. or P.M. appropriately displayed. (See the diagram for: A.M. and P.M. indicator.)

The day and date digits display can be set separately from the hour setting function and the day and date digits are not changed even if 12 P.M. is passed while setting the hours. Leave the crown out . . .

Continued

**4. TO SET THE MINUTE AND SECONDS DIGITS**—By next turning the crown to the right once more, the minutes and seconds are indicated and the other indications are extinguished. The minutes are changed successively by turning the crown to the left. In this case, however, the second readout is returned to zero and stops counting. When the desired minute appears, return the crown to the center position. The minutes can be set separately from the hour digits. The hour digits are not changed even if 59 minutes is passed while setting the minutes. The second readout is started exactly from zero when the crown is pushed back into the normal position in accordance with a time signal. At that instant, the date, day, hour, minute and seconds are all displayed at the same time.

**NOTE:** When you wish to set only the seconds accurately, pull the crown out, leaving all indications as they are, and push it back at zero seconds, in accordance with a time signal. The seconds indications will then be started from zero to keep the correct time. If the seconds are indicating between 0 and 29 seconds when the crown is pushed back into the normal position, the seconds indication starts from zero. But if they are indicating between 30 and 59 seconds, one minute is added and then the seconds start from zero.

**5. ADJUSTING THE DATE, DAY OF THE WEEK AND HOUR WHEN CHANGING TIME ZONES**—When the date, day of the week or hour need to be changed due to your travelling from one time zone to another, please refer to adjusting procedures #1, 2, and 3.


**6. TO USE THE LIGHT**—When the crown is at the normal position, push the crown in slightly to energize the light. It illuminates the time display in the dark.

**NOTE:** The battery life will last over one year when the light is used ten times a day (one second at a time). Unnecessary use of the light may run the battery down in less than one year.

## DB SERIES — (Cal. 0662)

### Features:

- Liquid crystal quartz digital (continuous readout of hour, minute and seconds)
- Built-in illumination system

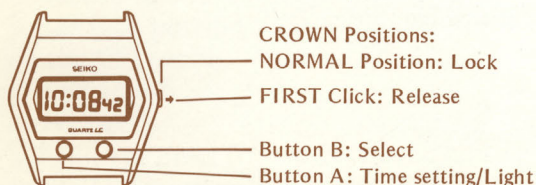

**1. TO SET THE SECONDS DIGITS**—First, pull the crown all the way out to set the time. The seconds digits immediately start flashing when the crown is pulled all the way out. This indicates that the seconds digits are ready to be changed manually. When Button A is then depressed, it automatically causes the seconds digits to return to 00 in accordance with a time signal.

Continued

NOTE: When the seconds digits indicate any numbers from 01 to 29, the digits are reset automatically whenever Button A is depressed. When digits from 30-59 are displayed and Button A is depressed, one minute is added and the seconds digits immediately return to 00 again.

**2. TO SET THE MINUTE DIGITS**—While the seconds digits are flashing, depress Button B, then the minute digits will immediately start flashing. This indicates that the minute digits are ready to be changed manually. Each depression of Button A will then advance the minute digits one minute until the desired minute display is shown.

**3. TO SET THE HOUR DIGITS**—While the minute digits are flashing, depress Button B again. The hour digits will then start flashing. This now indicates that the hour digits are ready to be changed manually. By depressing Button A, the hour digits are advanced one hour. Each depression of Button A will then advance the hour digits one hour to the desired time. Be sure to push the crown in to the normal position each time after setting the time.

When you want to set only the minute or the hour, you can adjust them independently from the other two timekeeping indicators. For example, if you are travelling and need to adjust the hour, first pull the crown all the way out and then push Button B two times. After the hour digits start flashing, depress Button A each time you want to advance the hour digits one hour until the desired hour is reached.

Push the crown in to the normal position after setting time. To make changes in the minute digits only, depress Button B once after the crown is pulled all the way out.

The minute digits then start flashing and can be changed as described above.

**4. TO USE THE LIGHT**—Button A serves both for setting the time and activating the tiny illuminating light. The light illuminates the hour, minute and seconds digits in the dark.

When Button A is depressed, the light is activated. Button A activates the light only when the crown is at the normal position.


NOTE: The battery life will last over one year when the light button is pushed ten times a day (one second at a time). Unnecessary pushing of the light button may run the battery down in less than one year.

## BRACELET ADJUSTING INSTRUCTIONS

### 1. PUSH PIN TYPE

#### HOW TO ADJUST


Use ordinary pin pusher as illustrated. Press spring bar down and twist link gently for removal. Repeat operation for removal of additional links. To reassemble, reverse procedure.

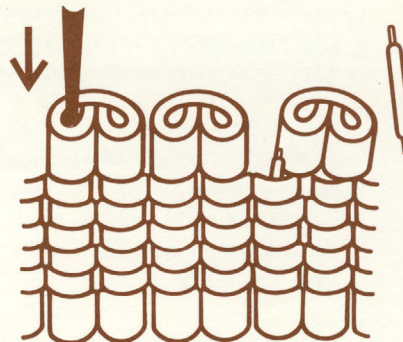

### 2. CLIP SPRING TYPE

#### HOW TO ADJUST


Insert pin pusher in hole of clip spring as illustrated. Slide outward for removal. Repeat operation for removal of additional links.

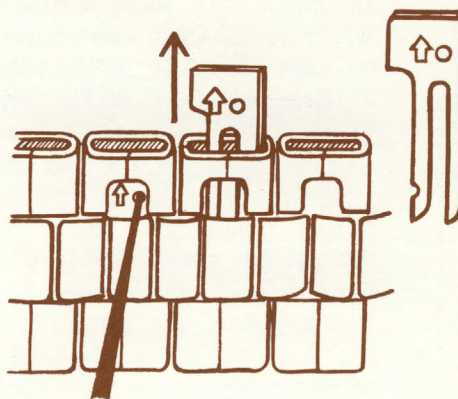

### 3. ADJUSTABLE SLIDING CLASP

#### HOW TO ADJUST

Open top clasp lock. Use pin pusher to open inside lock portion of clasp to enable sliding action. After size adjustment press inside lock portion down firmly.

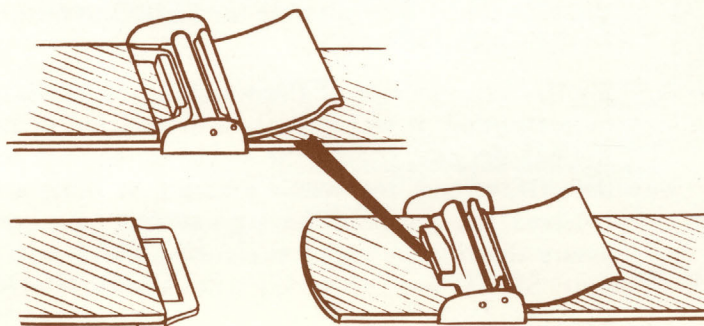

OTHER SIMILAR TYPES OF EASILY ADJUSTABLE BRACELETS NOT SHOWN.

BRACE-  
LET  
ADJUST-  
MENT

SERVIC-  
ING  
PROCE-  
DURES

## SEIKO SERVICE PROCEDURES

It is SEIKO'S sincere belief that each and every customer deserves the fastest, most efficient service available. We are therefore listing our current service procedures, which, if followed carefully, should provide satisfaction for you and your customers with a minimum amount of expense and delay.

It is most important that constant communication and cooperation be maintained between SEIKO sales and SEIKO service.

Any SEIKO watch requiring service should be forwarded to your nearest authorized SEIKO Center. Their addresses and telephone numbers are listed on the back cover.

We suggest that for your protection you forward all timepieces insured. A short note describing the specific problem should always accompany the timepiece. For those watches which are within the terms of warranty, the warranty coupon, completely filled in, *must* accompany the watch in the package. PLEASE REALIZE THAT UNLESS THE WARRANTY IS RETURNED ALONG WITH THE WATCH, THERE MAY BE A CHARGE FOR SERVICING. PLEASE NOTE THAT THE BAND, CRYSTAL, AND CROWN ARE NOT COVERED BY THE WARRANTY. In the event that a timepiece must be returned for a second time within the same warranty period, please refer to the previous SEIKO service memo number and the date of the previous repair. We suggest that when returning a watch, you maintain records to insure that if it becomes necessary to check on a repair, you will have the pertinent information to do so. We suggest you indicate the case and serial numbers, your job number or customer name, SEIKO's service memo number if one is available, date of mailing, case and dial color, etc. If it becomes necessary to contact a SEIKO Center regarding a repair, PLEASE REFER TO THE SEIKO SERVICE MEMO NUMBER. This will result in your receiving accurate information as expeditiously as possible. When the watch is forwarded, please do not return it in the original display watch box. Due to the different complications involved in the return of these boxes, it is impossible for SEIKO to return them and they are discarded upon receipt.


Shortly after receipt of the watch at the SEIKO Center, a service memo will be forwarded. It will indicate a description of the watch, your job number, the charges due, if any, the servicing required and the approximate shipping date. If, after a reasonable amount of time, a service memo has not been received for a repair, we suggest that you contact the SEIKO Center to assure that the package was received. Please note that once a service memo is sent, SEIKO has proceeded with repairs. *IF AN ESTIMATE IS DESIRED, PLEASE INDICATE THIS WHEN THE WATCH IS FORWARDED TO US.*

Occasionally, a "stock" watch may not function properly. A STOCK WATCH IS CLASSIFIED AS ONE WHICH HAS NEVER BEEN SOLD TO THE CONSUMER. IF A STOCK WATCH IS BEING RETURNED, PLEASE INDICATE ON THE JOB ENVELOPE OR INVOICE THAT THE TIMEPIECE IS FROM YOUR STOCK. PLEASE REALIZE THAT TIMEPIECES WHICH HAVE BEEN WORN CANNOT BE ACCEPTED AS STOCK WATCHES.

We trust that these service procedures have been helpful and we are confident that if they are strictly adhered to, you will receive prompt, efficient service.

Thank you for your cooperation.

SEIKO TIME CORPORATION

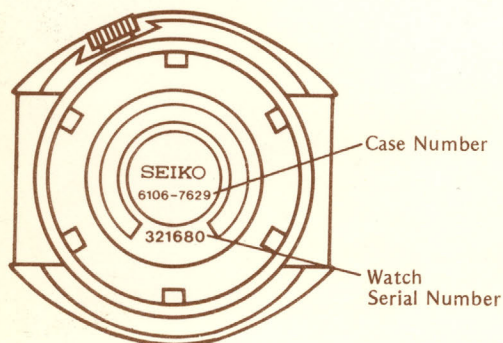

## SEIKO

Full One-Year

Warranty Repair Coupon

|                                                |           |
|------------------------------------------------|-----------|
| Watch No.                                      | Case No.  |
| 327680                                         | 6106-7629 |
| Date of sale                                   |           |
| 11-17-75                                       |           |
| Sold to                                        |           |
| John Price<br>Meadow Lane<br>Omaha, Neb. 68102 |           |
| Sold by                                        |           |
| Smith Jewelers<br>Omaha, Neb. 68102            |           |
| Code: 101                                      |           |

Repair Coupon . . . To be detached and submitted with watch only when watch is returned for any repair covered by the warranty.

## SEIKO'S SERVICE FACILITIES

For service in the true Seiko tradition, five fully equipped Seiko service centers from coast to coast are at your service whenever and wherever you need it.

### SEIKO CENTERS

|             |                                                                                             |
|-------------|---------------------------------------------------------------------------------------------|
| New York    | STC<br>404 5th Avenue (6th floor)<br>New York, N.Y. 10018<br>(212) 977-2828                 |
| Dallas      | STC<br>8700 North Stemmons<br>Suite 101A<br>Dallas, Texas 75247<br>(214) 630-4881           |
| Los Angeles | STC<br>3321 Wilshire Blvd.<br>Los Angeles, California 90010<br>(213) 380-0340               |
| Chicago     | STC<br>29 East Madison<br>Suite 1112-13<br>Chicago, Ill. 60602<br>(312) 332-6530            |
| Honolulu    | STC Ltd.<br>Shop 1132 Ala Moana Shopping Center<br>Honolulu, Hawaii 96814<br>(808) 955-1358 |

# SEIKO

SEIKO TIME CORPORATION  
640 FIFTH AVENUE, NEW YORK, N.Y. 10019